

CROSS FLOW FAN - AC Motor

LWCA-40700SN-08-00

Ningbo Longwell Electric Technology CO.,LTD

NO.100, Ditang District ,Yuyao,Zhejiang Province,China 315400

Phone 86 574 6218 9863

Fax 86 574 6218 9863

sales@zjlongwell.com

www.longwellfans.com



Model No.:	LWCA-40700SN-08-00
Version Number:	A0
Make :	Zhang
Review :	Guo
Approvd :	Ye
Date:	20260728



Version number	Notes Remarks	Reason content	Revised by	Date

CROSS FLOW FAN - AC Motor

LWCA-40700SN-08-00

Nominal Data

Project1	Unit	Rating
Nominal Voltage :	[VAC]	230
Frequency :	[Hz]	50
Speed :	[rpm]	2200
Power input :	[W]	20
Air flow (Max) :	[m3/h]	207
	[CFM]	122
Static pressure (Max) :	[Pa]	23
Noise level :	dB(A)	37
Max.ambient Temp :	°C	60
Min.ambient Temp :	°C	-25
Insulation Class :		Class F
Work system :		S1

CROSS FLOW FAN - AC Motor

LWCA-40700SN-08-00


Technical Features

Material :	Aluminium (Impeller); Galvanized sheet (frame)
Service environment :	Operating temperature: -25~60℃; Operating humidity: 5 ~ 85 % RH Storing temperature: -25~60℃; Storing humidity: 0 ~ 85 % RH
Insulation Class :	Class F (155℃)
Insulation Resistance:	Cold resistance between stator core and winding is more than 50 m Ω . (using DC500V Meg-ohmmeter to test).
Pressure test:	Motor run 1 seconds, under 1800V/ 2mA ,no breakdown and flash-over.
Protected Mode:	Z.P impedance protection.
Certification	CE
Bearing	Ball bearing

CROSS FLOW FAN - AC Motor

LWCA-40700SN-08-00


Product Drawing

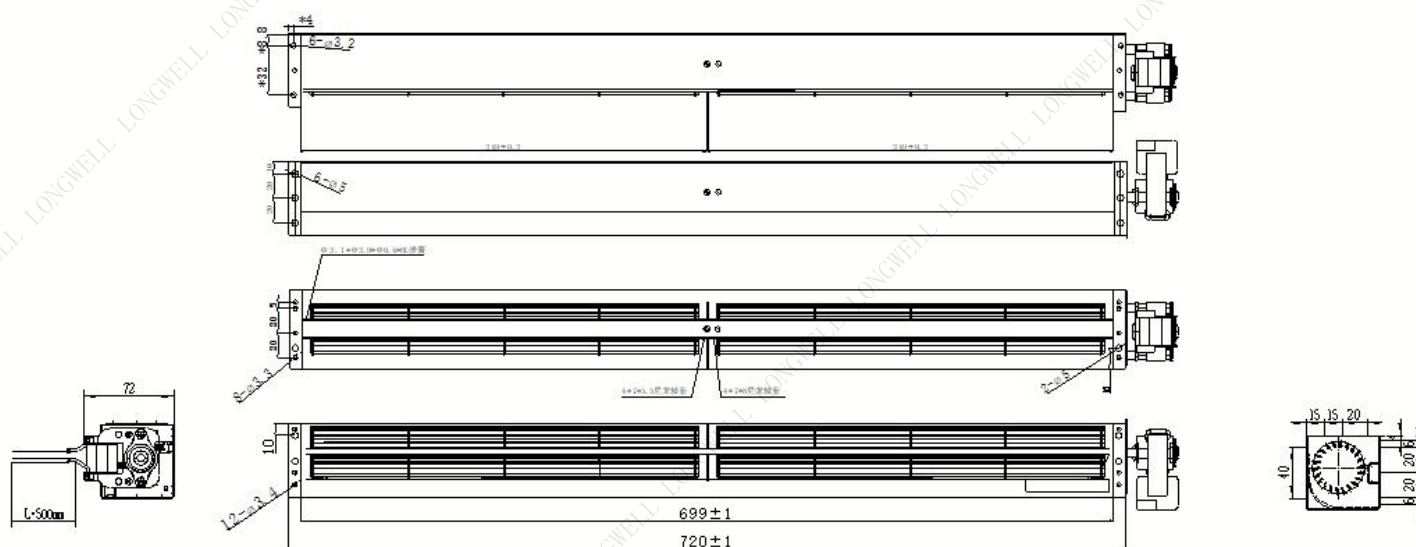

CROSS FLOW FAN - AC Motor

LWCA-40700SN-08-00

Wiring Diagram

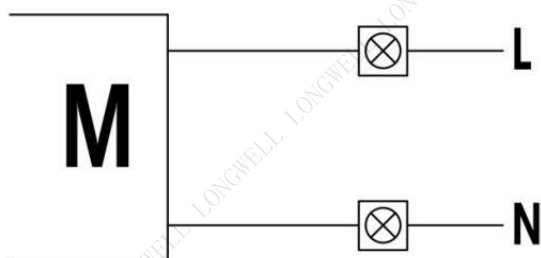

Label

Confirm by sales team when placing sample order or bulk order

CROSS FLOW FAN - AC Motor**LWCA-40700SN-08-00****Warning:**

1. The fan and motor must be used within the prescribed scope of temperature and humidity otherwise it will cause an unexpected damage.
2. Fan is not set wrong connection protection , Provide the right voltage and line sequence according to the nameplate otherwise it will damage the product.
3. Wiring depends on the wiring diagram and please connect the earth ground if required. We don't suggest to use the extension cord .Any wrong connection may cause the damage of the fan.
4. Be careful when moving the fan and do not take the blades as a handle because it will cause the distortion and chatter.
5. Connect the thermostat if required otherwise it would damage the motor because of the over temperature.
6. The length of the mounting screws shall not exceed the requirement, otherwise the fan will be damaged.
7. Do not disassemble the fan arbitrarily. It may hurt the capacity of water tightness and dynamic balance or cause other serious problems.
8. The over current protector is necessary in case the damage from the over current.
9. Install the fan as required, any other installing direction would affect the service life of the product.
10. The fan with inlet ring should be installed follow the requirements or it will affect the performance.
11. Users should use the standard cable when install the fan otherwise it will affect the water tightness.
12. The fan should keep away from the children especially the blade and electric parts .And the children are not allowed to operate the fan alone.
13. Do not connect the white signal cable directly to the red signal cable or the external DC power supply. Otherwise, the fan may be damaged.
14. Please do not perform extraction and insertion of the connector under revolution irrespective of power on and power on and power off , and the fan should not touch or move when running.
15. Do not lift the fan wire when taking the fan, and do not impact the bearing during the handling process.
16. The version change may not be notified, please ask our company for the latest version when necessary.
17. Please be informed that we are not responsible for any damage or accidents caused by violating above rules to install and operate the fan.

CROSS FLOW FAN - AC Motor**LWCA-40700SN-08-00****Approval****CUSTOMER APPROVAL****CUSTOMER SIGNATURE:****DATE :****Product Data Confirm :**