

CROSS FLOW FAN - DC Motor

LWCD-40250LG-06-00

Ningbo Longwell Electric Technology CO.,LTD

NO.100, Ditang District ,Yuyao,Zhejiang Province,China 315400

Phone 86 574 6218 9863

Fax 86 574 6218 9863

sales@zjlongwell.com

www.longwellfans.com



Model No.:	LWCD-40250LG-06-00
Version Number:	A0
Make :	ZHANG
Review :	YE
Approvd :	GUO
Date:	20260813



Version number	Notes Remarks	Reason content	Revised by	Date

CROSS FLOW FAN - DC Motor

LWCD-40250LG-06-00

Nominal Data

Project1	Unit	Rating
Nominal Voltage :	[VDC]	12
Voltage Range:	[VDC]	9~16
Speed :	[rpm]	2400
Current :	[A]	0.18 ± 10%
Power input :	[W]	2.16
Air flow (Max) :	[m3/h]	87
	[CFM]	51
Static pressure (Max) :	[Pa]	23
Noise level :	dB(A)	35
Max.ambient Temp :	℃	60
Min.ambient Temp :	℃	-25
Rotating Direction:		CCW

CROSS FLOW FAN - DC Motor

LWCD-40250LG-06-00

Technical Features

Material	Aluminium (Impeller); cold-rolled sheet (frame)
Life expectancy	20,000Hours(L10), At 25℃ room, humidity 30%~90%RH
Service environment	Operating temperature: -20~50℃; Operating humidity: 0 ~ 90 % RH Storing temperature: -25~60℃; Storing humidity: 0 ~ 80 % RH
Insulation Resistance	/
Packing Vibration Test	After packing, 1.1G load is applied in XYZ three directions vibration test for 30min .No serious damage.
Packing Shock Proof Test	After bunching, the height is 30 cm, and 1 Angle, 3 sides and 6 sides fall naturally without serious damage bad.
Certification	CE
Bearing	Ball bearing


Other Features

Speed Control :	PWM signal :frequency 1K~25HKZ,amplitude 5V,duty cycle 0 ~100
	Linear voltage:0-10V When the effective value of control voltage is greater than 1.5V,the motor starts up ;when the effective value of control voltage is greater than 10±0. 1V,the motor runs at the full speed ;when the fan is running ,if the effective value of control voltage is lower than 1.5V ; The motor stops.
Vibration of the fan :	Vibration speed virtual value of fans accord with JB/T8689

CROSS FLOW FAN - DC Motor

LWCD-40250LG-06-00

Noise Test

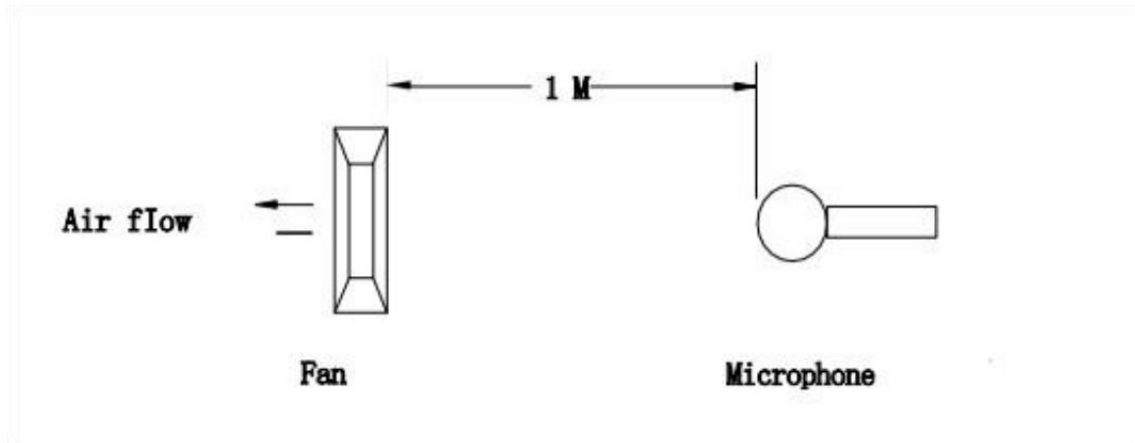


Noise is measured rated voltage in free air in an echoic chamber with B&K sound level meter with microphone at a distance of one meter from the fan intake. The background noise is 18Db(A) max.

CROSS FLOW FAN - DC Motor

LWCD-40250LG-06-00


Product Drawing

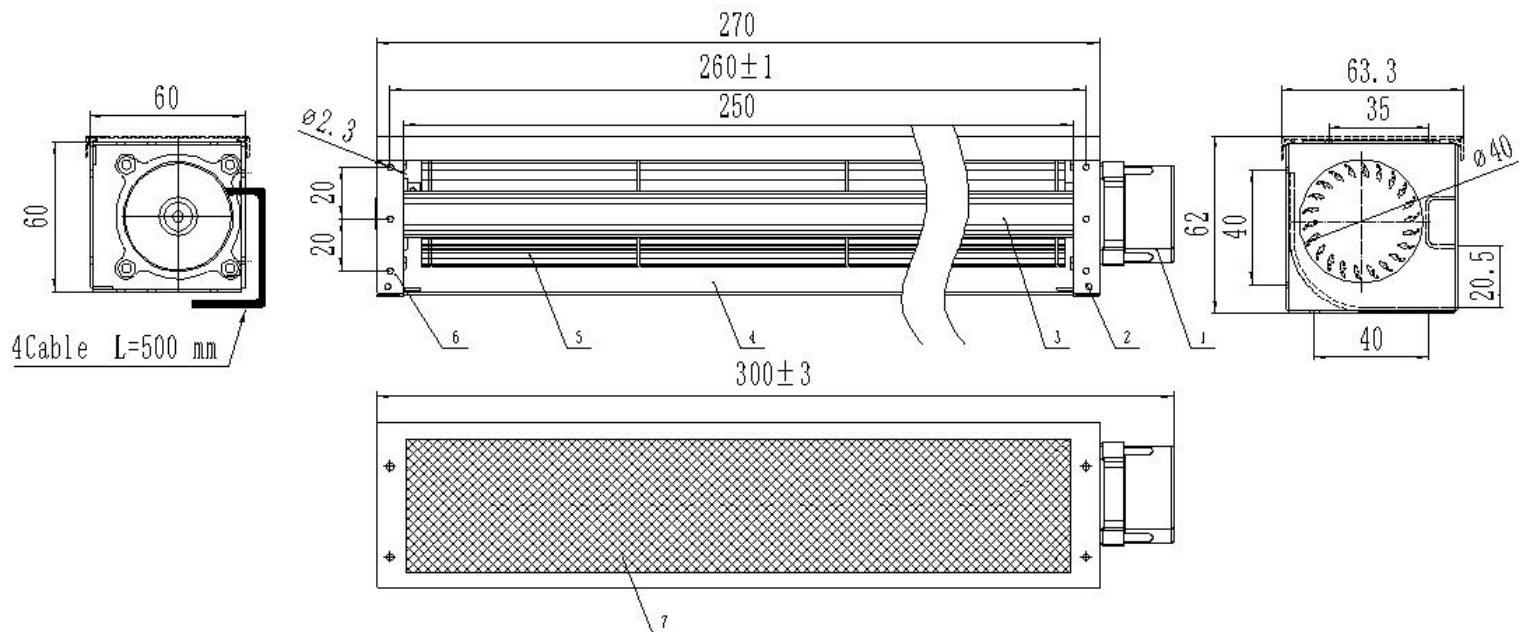

CROSS FLOW FAN - DC Motor

LWCD-40250LG-06-00

Wiring Diagram

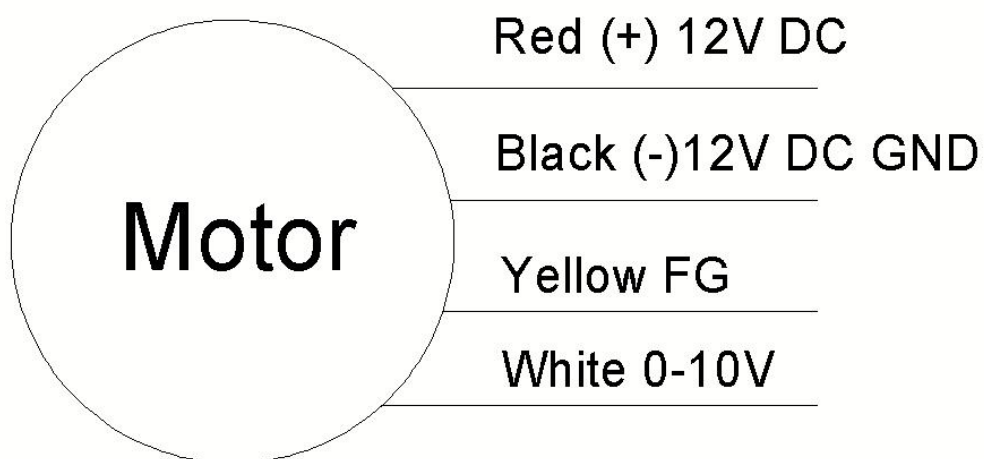

Label

Confirm by sales team when placing sample order or bulk order

CROSS FLOW FAN - DC Motor**LWCD-40250LG-06-00****Warning:**

1. The fan and motor must be used within the prescribed scope of temperature and humidity otherwise it will cause an unexpected damage.
2. Fan is not set wrong connection protection , Provide the right voltage and line sequence according to the nameplate otherwise it will damage the product.
3. Wiring depends on the wiring diagram and please connect the earth ground if required. We don't suggest to use the extension cord .Any wrong connection may cause the damage of the fan.
4. Be careful when moving the fan and do not take the blades as a handle because it will cause the distortion and chatter.
5. Connect the thermostat if required otherwise it would damage the motor because of the over temperature.
6. The length of the mounting screws shall not exceed the requirement, otherwise the fan will be damaged.
7. Do not disassemble the fan arbitrarily. It may hurt the capacity of water tightness and dynamic balance or cause other serious problems.
8. The over current protector is necessary in case the damage from the over current.
9. Install the fan as required, any other installing direction would affect the service life of the product.
10. The fan with inlet ring should be installed follow the requirements or it will affect the performance.
11. Users should use the standard cable when install the fan otherwise it will affect the water tightness.
12. The fan should keep away from the children especially the blade and electric parts .And the children are not allowed to operate the fan alone.
13. Do not connect the white signal cable directly to the red signal cable or the external DC power supply. Otherwise, the fan may be damaged.
14. Please do not perform extraction and insertion of the connector under revolution irrespective of power on and power on and power off , and the fan should not touch or move when running.
15. Do not lift the fan wire when taking the fan, and do not impact the bearing during the handling process.
16. The version change may not be notified, please ask our company for the latest version when necessary.
17. Please be informed that we are not responsible for any damage or accidents caused by violating above rules to install and operate the fan.

CROSS FLOW FAN - DC Motor

LWCD-40250LG-06-00

Approval

CUSTOMER APPROVAL**CUSTOMER SIGNATURE:****DATE :****Product Data Confirm :**